



# SS10 SHOWER SEAL

**STOPS LEAKAGES IN TOILETS WITHOUT REMOVING THE TILES. REPELS RAINWATER FROM EXTERIOR MASONRY WALL, GRANITE AND MARBLE SURFACE**

## USES


- Suitable for exterior wall, tiles, stone, granite, marbles and timber surfaces.
- Reduces water absorption by about 95%.
- Permanently bonded to substrate.
- Does not leave any oily residue on treated surface.
- Reduce or prevent algae growth.

## FEATURES


- Solvent - free aqueous silicone ester emulsion.
- Reduces water absorption capacity of building materials.
- Waterproof external brick walls and exterior walls without leaving any patch.
- Can be incorporated into low slump cementitious products, such as imitation stone blocks and paving stones; to significantly permeability to water and the occurrence of unsightly finish.
- An ideal solution for leaking bathrooms and toilets. Simply spray or brush on tiles and grouts.




**SURFACE TYPE: MARBLE**

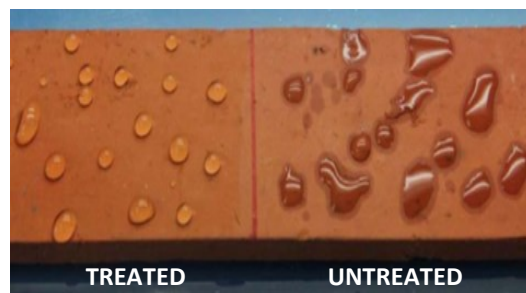

**SURFACE TYPE: BRICK**

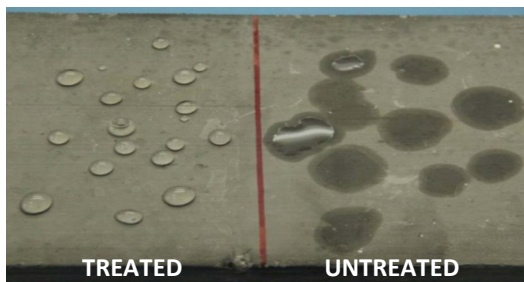

**SURFACE TYPE: CONCRETE**

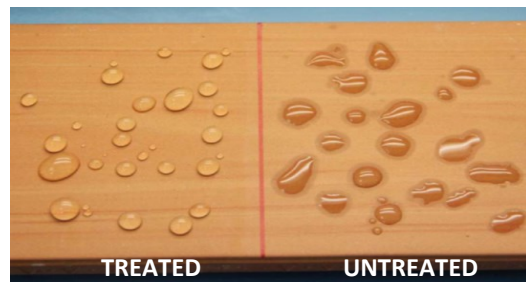

**SURFACE TYPE: WALL TILE**



**SURFACE TYPE: LIME STONE**



**SURFACE TYPE: POTTERY CLAY**

## WARRIOR PTE LTD

Blk 17 Marsiling Industrial Estate Road 1 # 01-11 Singapore 739279

Tel: (65) 6364 5100 / 6364 5060 / 6367 3676 Fax: (65) 6364 0629

[war99@singnet.com.sg](mailto:war99@singnet.com.sg) [www.warrior.com.sg](http://www.warrior.com.sg)





# SS10 SHOWER SEAL

**STOPS LEAKAGES IN TOILETS WITHOUT REMOVING THE TILES. REPELS RAINWATER FROM EXTERIOR MASONRY WALL, GANITE AND MARBLE SURFACE**

## APPLICATION METHODS

### Toilet:

- Ensure surface to be treated is clean and intact. It should be free from bitumen, oil, grease and loose particles.
- All the cracks, joints and crevices need to be filled using **(W5 MULTI BOND + Cement)**.
- Allow the toilet to dry for 1 day before application.
- Apply **SS 10** by brush or by spray, apply 2 coats wet over wet onto the wall and floor, allow 12 hours for curing.
- Allow the dripping water contain inside the floor screed to drip dry in about 5 to 7 days.
- Check for the result.
- If it is still leaking, it could be due to the pipe leak. Please engage the service of a waterproofing contractor.

### External Wall:

**Stone is sensitive, test apply on a small area, to check on the changes in shade. Before full application.**

- Dilute **SS10 + Water = 1 + 10**
- Apply by straight-line spray or by brush, roller or flooding.
- **Avoid coating if there is a high possibility of rain.**
- **Allow 12 hours for curing.**



## TECHNICAL DATA

- Physical Form: Liquid with slight alcoholic odor.
- Specific Gravity: 0.95
- Coverage: 30 - 40 square metre /kg depending upon the porosity of the Substrate
- Health & Safety: Non-Hazardous, Non-Toxic and Non-Flammable

## PACKING

0.5 litre-bottle, 1 litre-bottle, 5 litre-carboy, 20 litre-jerry can.

***Disclaimer:** The information provided in this brochure is ensured to be as accurate as possible at the time of inclusion, however there may be inadvertent and occasional errors which may have slipped from our notice. Warrior Pte Ltd does not guarantee and make no representations or warranties of any kind about the information, advice and opinions provided and reserves the right to make changes and corrections at any time, without prior notice to any parties. Warrior Pte Ltd accepts no liability for any inaccuracies or omissions in its brochure and any decisions made based on information and opinions contained in the brochure is the sole responsibility of the user.*

## WARRIOR PTE LTD

Blk 17 Marsiling Industrial Estate Road 1 # 01-11 Singapore 739279

Tel: (65) 6364 5100 / 6364 5060 / 6367 3676 Fax: (65) 6364 0629

[war99@singnet.com.sg](mailto:war99@singnet.com.sg) [www.warrior.com.sg](http://www.warrior.com.sg)

